SATELLITE RADIO

OWNER'S MANUAL

-



a the man

一用

C



AB

124-5

1

SIRIUS

What is Sirius Satellite Radio?3
System Activation Process4
System Components4
Special Instructions
Selecting Satellite Radio Mode6
Channel Selection7
Channel Blocking/Unblocking7
Setting Memory Pre-Set Channels8
Selecting Memory Pre-Set Channels8
Selecting Program Types9
Electronic Serial Number/Sirius Identification Number (ESN/SID)10
Reception Quality10
Channel ListingInside Back Cover

DEALERSHIP TECHNICIAN MUST AFFIX ESN/SID STICKER HERE

ESN/SID STICKER PROVIDED WITH RECEIVER/ANTENNA KIT



What is Sirius Satellite Radio?

Sirius Satellite Radio uses direct satelliteto-vehicle broadcasting technology to provide listeners with 100 channels of clear digital programming from coast to coast. Customers are provided 60 channels of completely commercial-free music and 40 channels of world-class sports, news, entertainment and children's programming. From Sirius broadcasting studios, to its satellites, to your vehicle, Sirius presents an unparalleled entertainment experience.



Activation Mirror Hanger provided with your new system

System Activation Process

To activate your Sirius Satellite Radio service, call the toll-free number at 888-539-SIRIUS (888-539-7474) or visit the Sirius Web site at www.sirius.com. Please have the following information available when activating your system:

- 1. Electronic Serial Number/Sirius Identification Number (ESN/SID)
- 2. Valid credit card information
- 3. Vehicle Identification Number (VIN)

The ESN/SID serial number can be found on the mirror hanger provided during the initial installation, on page 3 of this manual, or obtained through the radio by following the steps located in the ESN/SID section of this manual.

System Components

Your Sirius Satellite Radio system includes a remote receiver that will interface with the radio in the vehicle's instrument panel by means of a data link, an antenna, and specific wiring. Careful consideration has been given to antenna location, product integration, and vehicle wiring to prevent vehicle-generated interference.

SPECIAL INSTRUCTIONS



For best reception keep objects out of this area

Special Instructions

To assure reception is not degraded, special care needs to be taken not to place items within the area around the rooftop antenna location. Metal objects placed within the line of sight of the antenna will degrade system performance. Larger luggage items should be placed forward of the rear-most roof rack stop position. Do not place items directly on or above the antenna.

Refer to the diagram above for keep-out zones.



Single CD Radio: RBK



Premium Radio, Cassette and CD: RBP, RBU, RAZ



Single Cassette Radio: RBB

Selecting Satellite Radio Mode

Mode Selection – Single Cassette or Single CD radios

To select Satellite Radio, press "MODE" until the word "SA" appears in the display.

A CD or cassette may remain in the player while in the Satellite Radio mode.

6-Disc CD Radio: RBQ

Mode Selection – Premium Radios (Cassette and CD or 6-Disc CD, or Navigation radio)

To select Satellite Radio, press "MODE" until the word "SIRIUS" appears.

The following will be displayed in this order:

- After three seconds, the current channel name and channel number will be displayed for five seconds.
- The current program type and channel number will then be displayed for 5 seconds.
- The current channel name and channel number will then be displayed until an action occurs.

A CD or cassette may remain in the player while in the Satellite Radio mode.

CHANNEL SELECTION/CHANNEL BLOCKING/UNBLOCKING



Single Cassette Radio: RBB

Making a Channel Selection

Seek

Press and release the "SEEK" button to search for the next channel. Press the top of the button to seek up and the bottom of the button to seek down. Satellite Radio will remain tuned to the new channel until you make another selection.

Tune

Press and release the "TUNF" button to change channels. Press the top of the button to tune up and the bottom to tune down. Holding the button will continue to bypass channels until the button is released.

Scan (Premium Radios Only)

Press and release the "SCAN" button to automatically change channels every 10 seconds (the radio will pause on each channel for 10 seconds before continuing to the next channel). The word "SCAN" appears between each channel change. To end the search, press the "SCAN" button a second time.

Channel Blocking/Unblocking

Sirius Satellite Radio offers the listener the option to restrict channel content that may be considered inappropriate or contain explicit language. Subscribers should contact Customer Care at 1-888-539-7474 to discuss available options for channel blocking or unblocking. Please have your ESN/SID information available.

SET/SELECT MEMORY PRE-SET CHANNELS



Single CD Radio: RBK



Single Cassette Radio: RBB

How to Set Memory Pre-sets

In addition to the 10 AM and 10 FM pre-set stations available, you have the added feature of storing up to 10 Satellite Radio channels. Pre-set memory channels stored in the Satellite Radio mode will not erase any AM or FM pre-set memory channels.

Select a channel that you wish to commit to push-button memory. Press the "SET" button. The symbol "SET 1" will now be shown in the radio display window. Select the button you wish to store the channel, and press and release that button. If a button is not pressed and released within 5 seconds after pressing the "SET" button, the channel will continue to play but will not be stored into push-button memory.

To add a second channel to each pushbutton memory, select a channel that you wish to commit to push-button memory. Press the "SET" button twice and the symbol "SET 2" will show in the display window. Each button can be set for "SET 1" and "SET 2." A total of 10 channels can be stored in push-button memory.



Premium Radio, Cassette and CD: RBP, RBU, RAZ



6-Disc CD Radio: RBO

NOTE (Premium Radios Only): Any control button that causes the channel to change will result in the new channel name and channel number to be displayed for 5 seconds, the new program type and channel number to be displayed for 5 seconds, and the new channel name and channel number to be displayed until an action occurs.

How to Select Pre-set Channels

To access stored Satellite Radio channels, push the number key on the radio corresponding with the desired pre-set channel. Each number key button stores up to two channels pushing the number key button a second time will access the second stored channel

NOTE (Premium Radios Only): When a pre-set button is used, the display will momentarily display "P" followed by the number that corresponds to the pre-set channel. For example, pushing button 1 will display "P1." Pushing button 1 again will display "P6" (the second stored channel under button 1).



Premium Radio, Cassette and CD: RBP, RBU, RAZ



6-Disc CD Radio: RBQ

Selecting Program Type (Classical, Rock, Country, Jazz, News, Comedy etc.) (Premium Radios Only)

Pressing the program type "PTY" button displays the current program type and "PTY" icon is lit. Within 5 seconds of pressing the "PTY" button, continuing to press "PTY" will display all program types. This button allows the customer to scroll through all program types sequentially while pressed. If "PTY" button is not pressed within 5 seconds, "PTY" icon will turn off and current program type will no longer be displayed.

Program Type "Scan" (Premium Radios Only)

To initiate a program type "SCAN", continue to press the program type "PTY" button until the desired program type is displayed and within 5 seconds press "SCAN." Ten seconds of audio will be transmitted from a channel that matches the program type selected before continuing to the next channel that matches the program type selected. Pressing the "SCAN" button a second time stops the search and turns the "PTY" icon off.

NOTE: Pressing the "SEEK" or "TUNE" button up or down while performing a program type scan will cause the channel to increase or decrease by one. The search will stop and program type "PTY" icon turns off. Pressing a pre-set button while performing a program type scan takes you to the stored channel. The search will stop and the program type "PTY" icon turns off.

Program Type "Seek" (Premium Radios Only)

To initiate a program type seek, continue to press the "PTY" button until the desired program type is displayed, and within 5 seconds press "SEEK." The channel will change to the next channel that matches the program type selected.

ELECTRONIC SERIAL NUMBER/SIRIUS IDENTIFICATION NUMBER/RECEPTION QUALITY



Mirror Hanger & Owner's Manual provided with your new system.

Electronic Serial Number/Sirius Identification Number (ESN/SID)

The Electronic Serial Number/Sirius Identification Number (ESN/SID) of your receiver is needed to activate your Sirius Satellite Radio system. If you do not have the ESN/SID (included on mirror hanger during installation or on page 3 of this manual), you may access it directly in your vehicle. To access this ESN/SID, ensure the ignition key is in "RUN" or "ACCESSORY" position and the radio is powered OFF (volume knob pushed in). Refer to the following steps:

Single Tape or Single CD Radios:

With ignition on and radio powered OFF, press the "Tape Eject or CD Eject" and "Time" buttons simultaneously for 3 seconds. Digits 1-3 of the ESN/SID will be displayed. Pressing the "SEEK UP" button will display the next set of digits, 3 digits at a time, until all 12 ESN/SID digits are displayed. The "SEEK UP" button pages up until the last digits are displayed; "SEEK DOWN" button pages down until the first digits are displayed. The radio exits the ESN/SID display mode when any other button is pushed or the ignition is turned off. The radio also exits ESN/SID display mode by timing out after 5 minutes if no other button is pushed.

Premium Radios:

With ignition on and radio powered OFF, press "CD Eject" and "Time" simultaneously for 3 seconds. Digits 1-12 of the ESN/SID will be displayed. The radio exits the ESN/SID display mode when any other button is pushed or the ignition is turned off. The radio also exits ESN/SID display mode by timing out after 5 minutes if no other button is pushed.

Reception Quality

Based on the nature of the audio broadcast, reception may be interrupted due to one of the following reasons:

- The vehicle is parked in an underground parking structure or stationed under a physical obstacle
- Dense tree coverage may interrupt service in the form of short audio mutes
- When driving the vehicle under wide bridges and along tall buildings, reception can be intermittent
- Antenna signal blockage can occur when the antenna is covered due to objects placed on or over the antenna viewing area (see Special Instructions section on page 5 of this manual).



Channel Listing as of April 2002

CHANNEL LISTING



107 NPR NOW 108 NPR TALK 109 PRI'S PUBLIC RADIO CHANNEL **WORLD RADIO NETWORK** 112 BBC WORLD SERVICE NEWS 114 C-SPAN RADIO **115** THE WEATHER CHANNEL RADIO NETWORK **116** SIRIUS TALK **(117)** REAL SIRIUS 119 ABC NEWS & TALK 1200 ESPN BADIO NETWORK ESPNEWS (123) SPORTS BYLINE USA 124) SPEEDVISION 125 OLN ADVENTURE RADIO SIRIUS HISPANIC TAL 140 BBC MUNDO 142 LA RED HISPANA 144 BADIO DEPORTIVO 146 RADIO MUJER 147 RADIO AMIGO SIRIUS ENTERTAINMENT 150 RADIO DISNEY 151 DISCOVERY RADIO 152 E! ENTERTAINMENT RADIO 154 A & E SATELLITE RADIO 156 RADIO CLASSICS 158 SCI FI **(159)** SIBIUS ENTERTAINMENT 160 SIRIUS COMEDY 161 SIRIUS ARTS 164 PERSONAL ACHIEVEMENT (165) WISDOM BADIO (167) AFRICAN AMERICAN TALK **(163)** THE SCANDAL CHANNEL (172) WOMEN'S TALK 175 GUY TALK **180** TRUCKER CHANNEL **184** PREVIEW CHANNEL

SATELLITE RADIO OWNER'S MANUAL





www.mopar.com